

Battery Status Indicator

12v & 24v Wiring Diagrams (Model: LL-BLBI)

 **Tech Support:**
Ph: 260-918-2758
Web: www.lakelite.com

The Battery Status indicator is perfect for checking the level of your boat lift battery. Simply push the button to check status.

Use One Indicator for each 12v battery.

NOTES: Do not check the battery level when the boat lift motor is on as it will not reflect the correct status.



Approximate Battery Levels (+/- 10%)



Excellent	>95%
Good	>75%
Fair	>50%
Poor	< 25%



Example Installation

Battery Status Indicator

12v & 24v Wiring Diagrams (Model: LL-BLBI)

 **Tech Support:**
Ph: 260-918-2758
Web: www.lakelite.com


12v Lift systems

1-Unit Required



24v Lift systems

2-Units Required

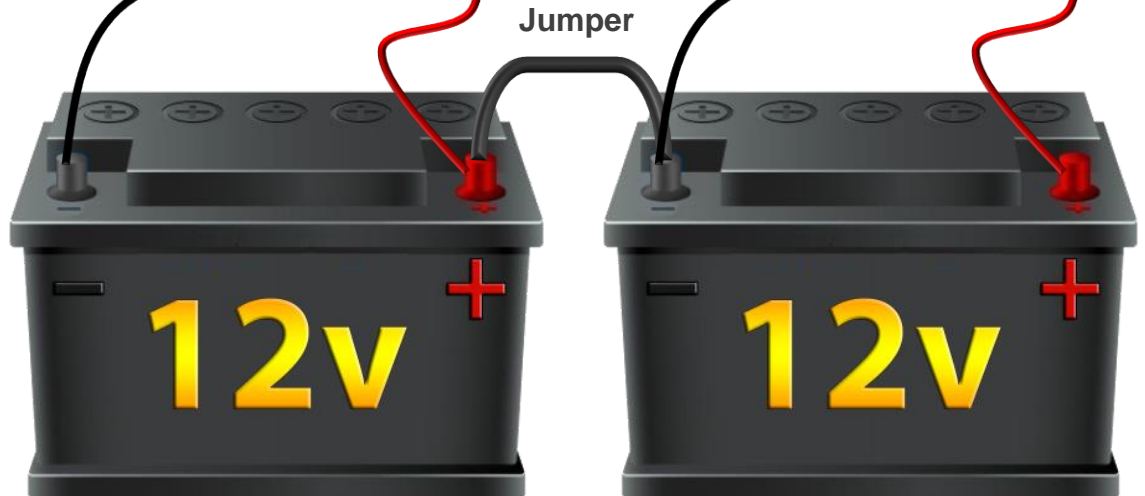

Battery Status Indicator

Perfect for displaying your battery Level.

Note Measurement is approximate

Excellent	>95%
Good	>75%
Fair	>50%
Poor	<25%




12v Lift systems

1-Unit Required



24v Lift systems

2-Units Required

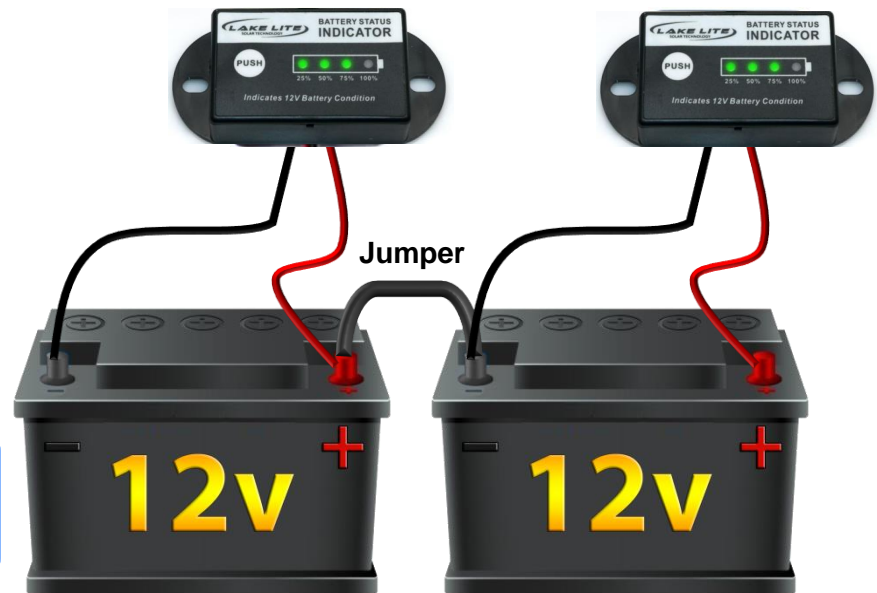

 **Tech Support:**
Ph: 260-918-2758
Web: www.lakelite.com